 
 
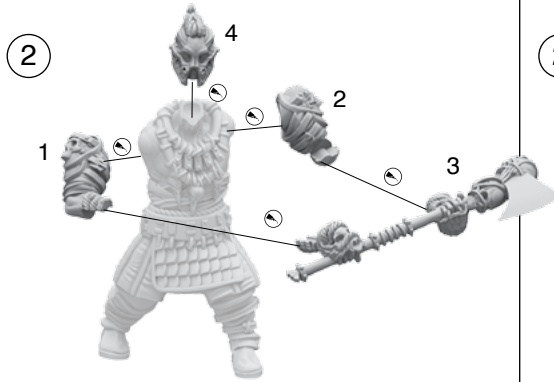 
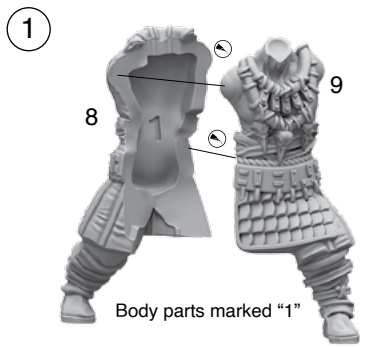 



Pose 1 Bearsark Troop

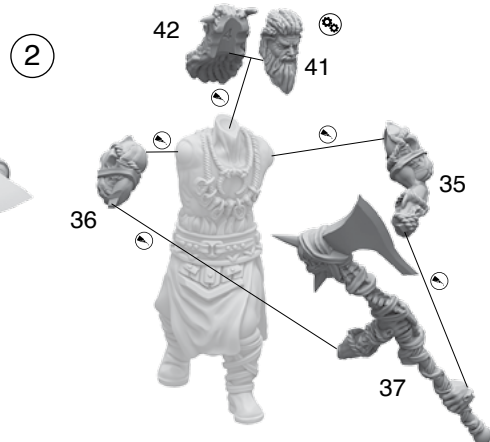


Pose 2 Bearsark Troop

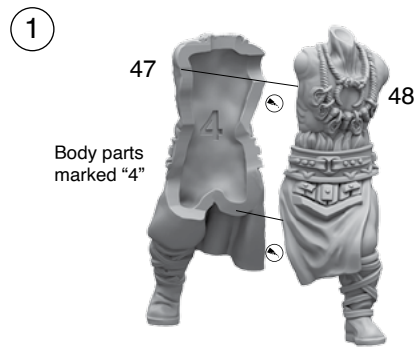

 
Pose 3 Bearsark Troop / Leader

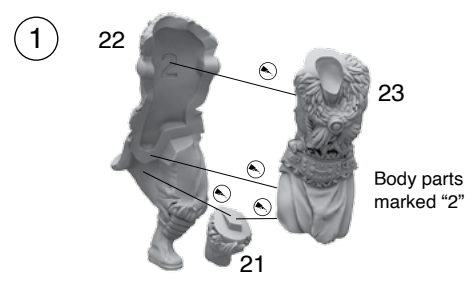


2 Bearsark Troop

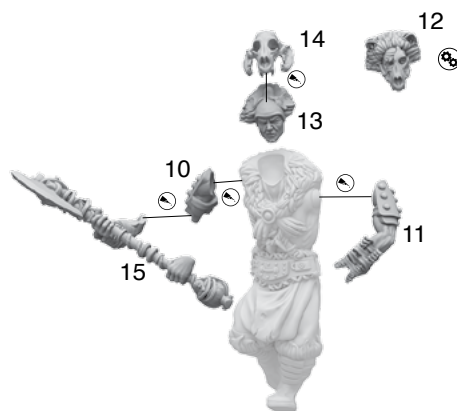 



2 Bearsark Leader

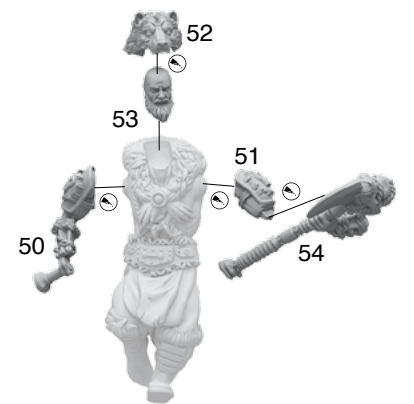 

Pose 4 Bearsark Troop / Standard Bearer

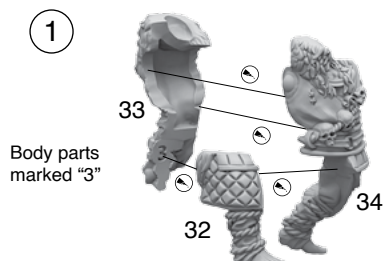 

2 Bearsark Banner Bearer

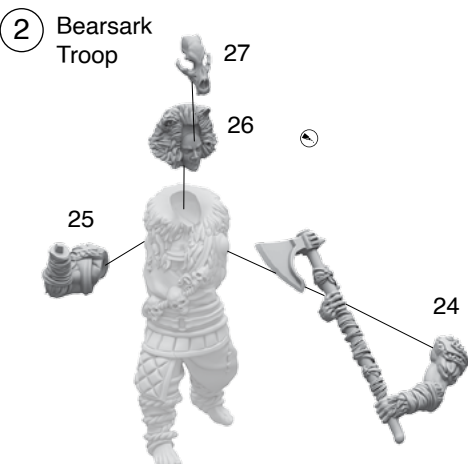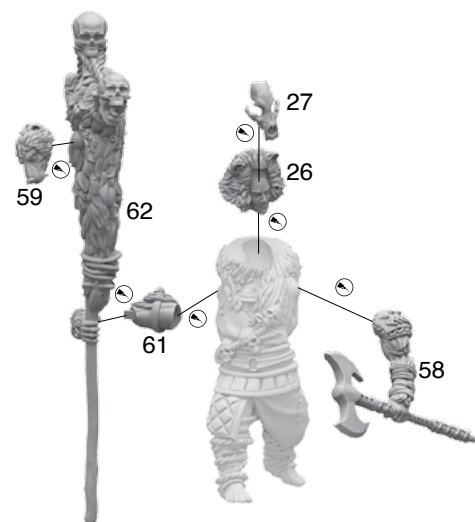  

Bearsarks / Ulfhednar Assembly Instructions

READ THIS FIRST

BEFORE ASSEMBLING YOUR MODEL KIT PLEASE READ THROUGH THE INSTRUCTIONS IN THIS BOOKLET CAREFULLY. A pair of plastic cutters is required to remove the plastic components in this kit from their frame. We advise using a mouldline scraping to clean up the parts. To assemble your model you will need plastic glue.

SYMBOL EXPLANATION

- Special Instruction - Please read
- Do not glue the components
- Rotate part
- Variant assembly
- Detail view
- Glue the component
- Stage complete
- Repeat process

You will need:



Plastic Glue	Plier Cutters	Precision Knife	For the latest update of these instructions, scan here
--------------	---------------	-----------------	--





BEARSARKS-ULFHEDNAR
NRDSULBER1121S002062023

x3

 
 
Pose 1 Ulfhednar Troop

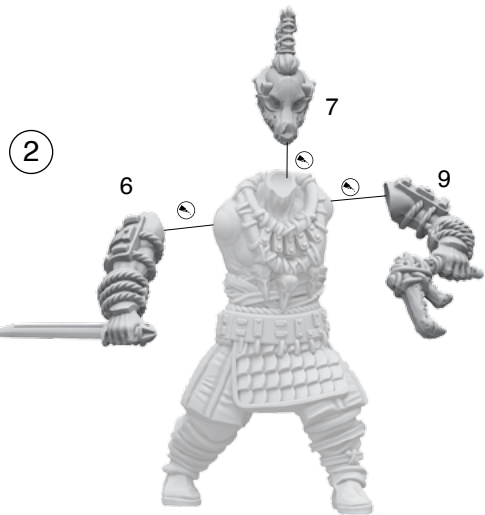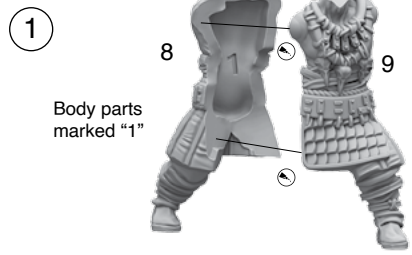



Pose 2 Ulfhednar Troop

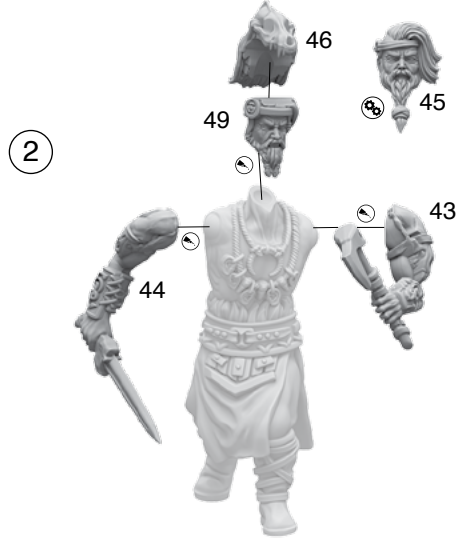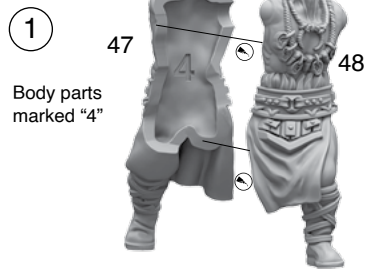  


Pose 3 Ulfhednar Troop / Leader

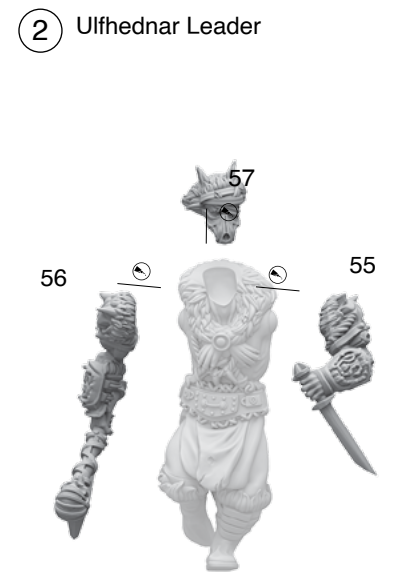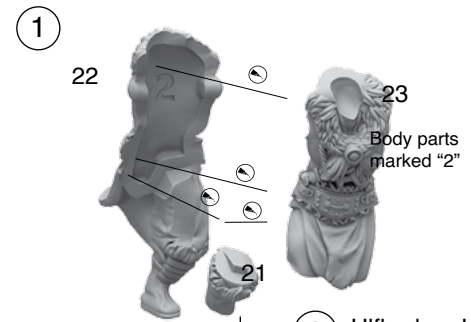  

  
Pose 4 Ulfhednar Troop / Standard Bearer

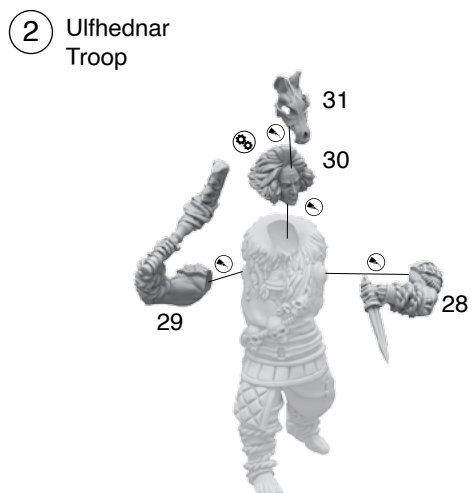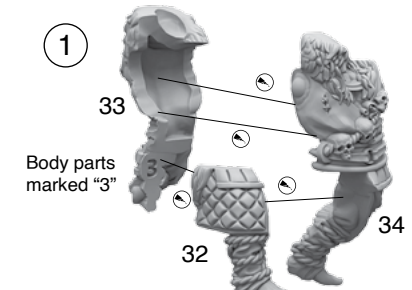

② Ulfhednar Banner Bearer

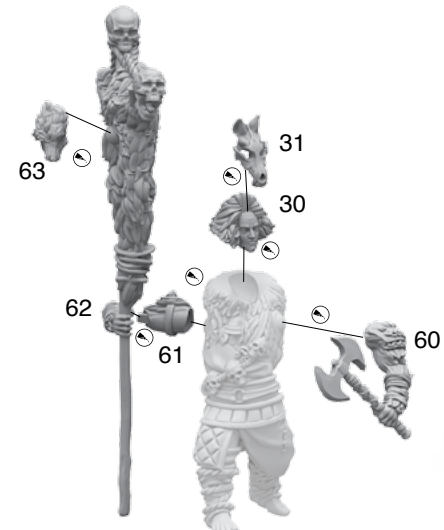 

Alternate Bearsark Heads

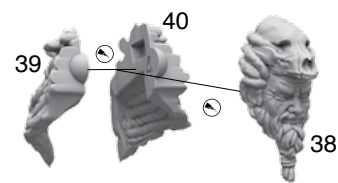 

Pose 2



Pose 2



Pose 3

Alternate Ulfhednar Heads



Pose 2



Pose 2



Pose 3