

Crann Guardians Assembly Instructions

READ THIS FIRST

BEFORE ASSEMBLING YOUR MODEL KIT PLEASE READ THROUGH THE INSTRUCTIONS IN THIS BOOKLET CAREFULLY. A pair of plastic cutters is required to remove the plastic components in this kit from their frame. We advise to carefully scrape mould lines using a hobby knife. To assemble your model you will need plastic glue for plastic parts or super glue for resin parts.



SYMBOL EXPLANATION

- | | | |
|---|--|--|
|  Special Instruction - Please read |  Do not glue the components |  Rotate part |
|  Variant assembly |  Detail view |  Glue the component |
|  Stage complete |  Repeat process | |

You will need:

	Plastic Glue		Plier Cutters		Precision Knife		Scan here: To find detailed instructions and the latest updates!
--	--------------	---	---------------	---	-----------------	---	---

What you get:

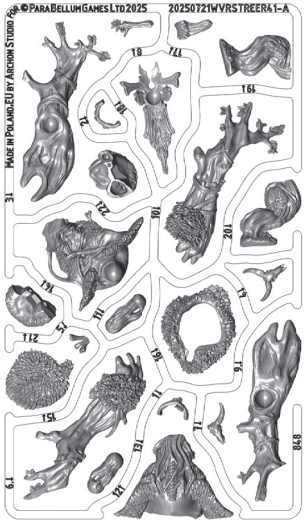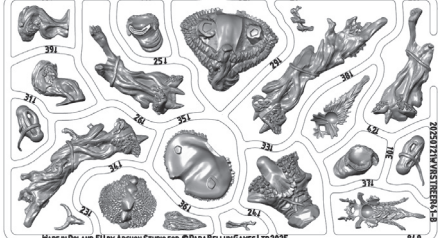	x1
	x1
	x1









- ♦ Make sure to dry fit parts before gluing.

Customizability:

- ♦ No interchangeability.

Crann Guardians

Pose 1

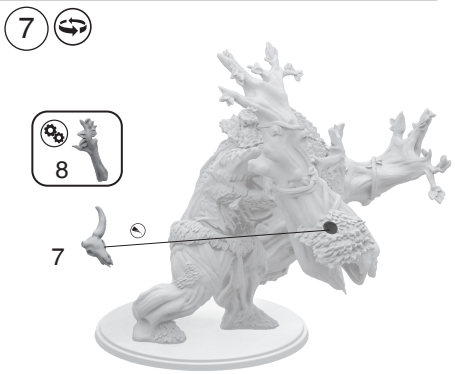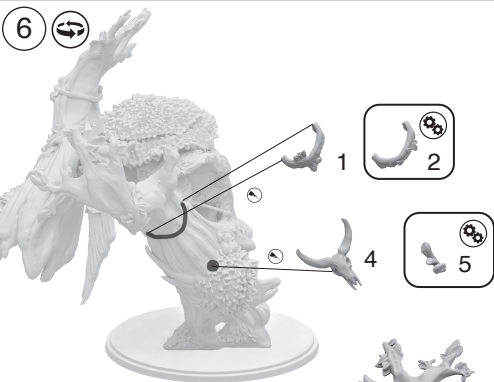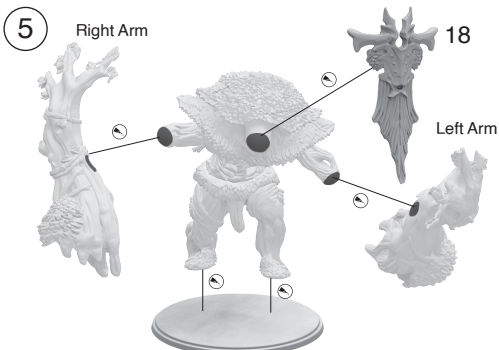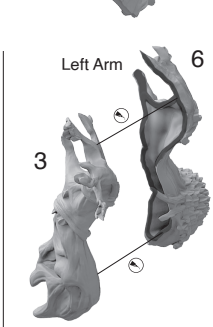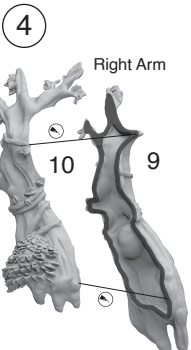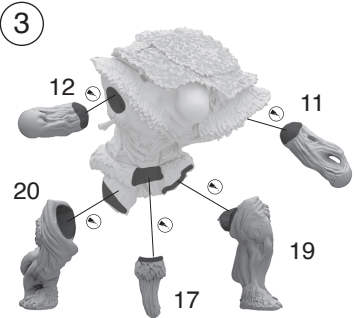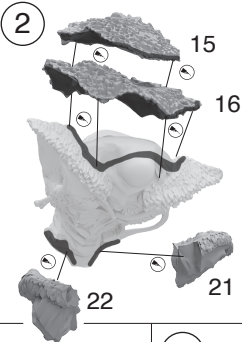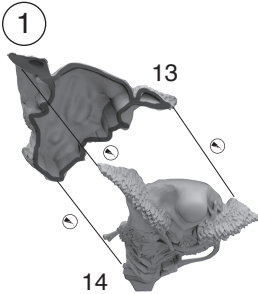


✓
Crann Guardian
Pose 1




Pose 2


1

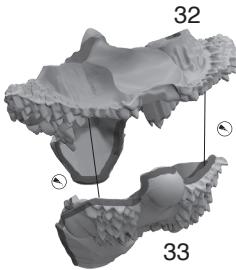


2

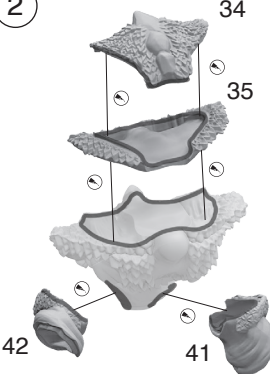


3

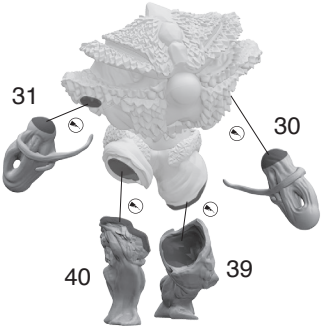

4

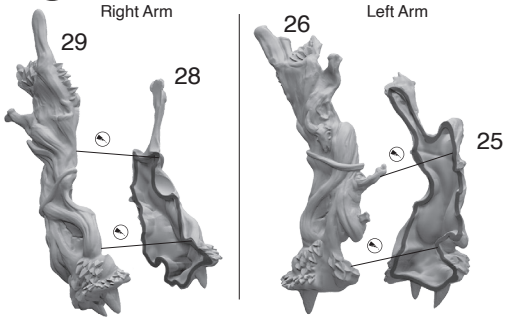

5

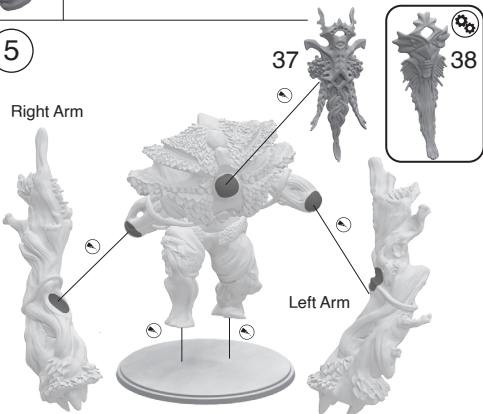

6



7




✓
Crann Guardian
Pose 2




Pose 3


1

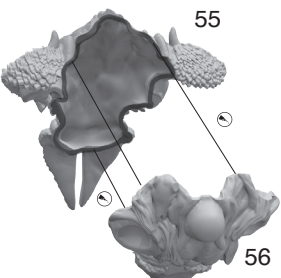

2

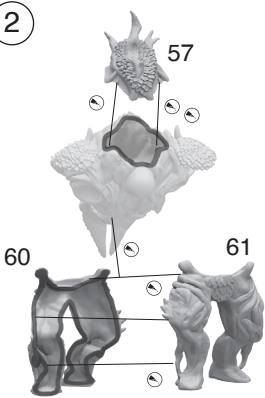


3

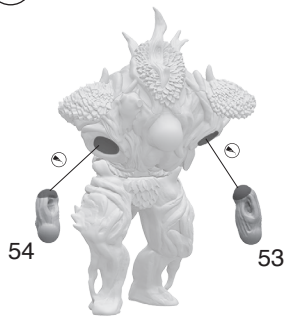

4

Right Arm


Left Arm

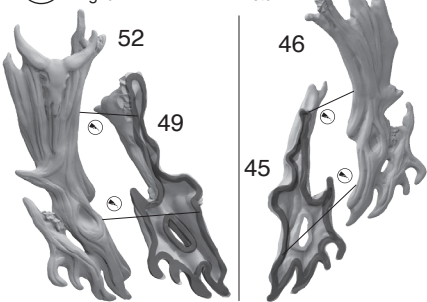

5

Right Arm


Left Arm

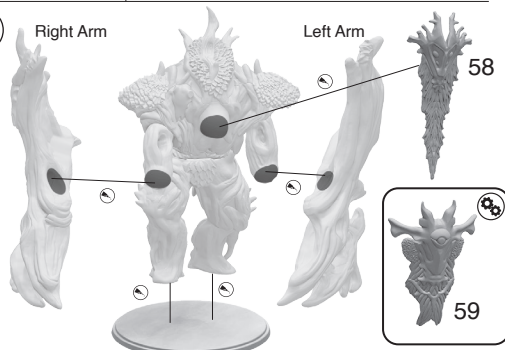

6



7

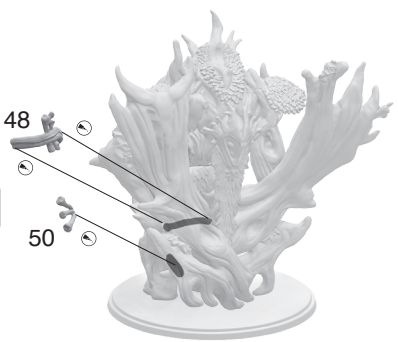

Crann Guardian
Pose 3

