

Assembly Instructions: Old Dominion Founder's Exclusive - Kerveros

READ THIS FIRST

BEFORE ASSEMBLING YOUR MODEL KIT PLEASE READ THROUGH THE INSTRUCTIONS IN THIS BOOKLET CAREFULLY. We recommend washing all parts with dish soap to remove any residue. Using a mouldline remover can help clean the parts effectively. To assemble your model, you will need super glue. You may also need green stuff or Milliput to fill small gaps. Any bent parts, they can be straightened by immersing them in warm water.

SYMBOL EXPLANATION

- | | | |
|---|--|--|
|  Special Instruction - Please read |  Do not glue the components |  Rotate part |
|  Variant assembly |  Detail view |  Glue the component |
|  Stage complete |  Repeat process | |

You will need:



Super Glue



Plier Cutters




Precision Knife




Scan here:
For the latest
update of the
instructions.

What you get:

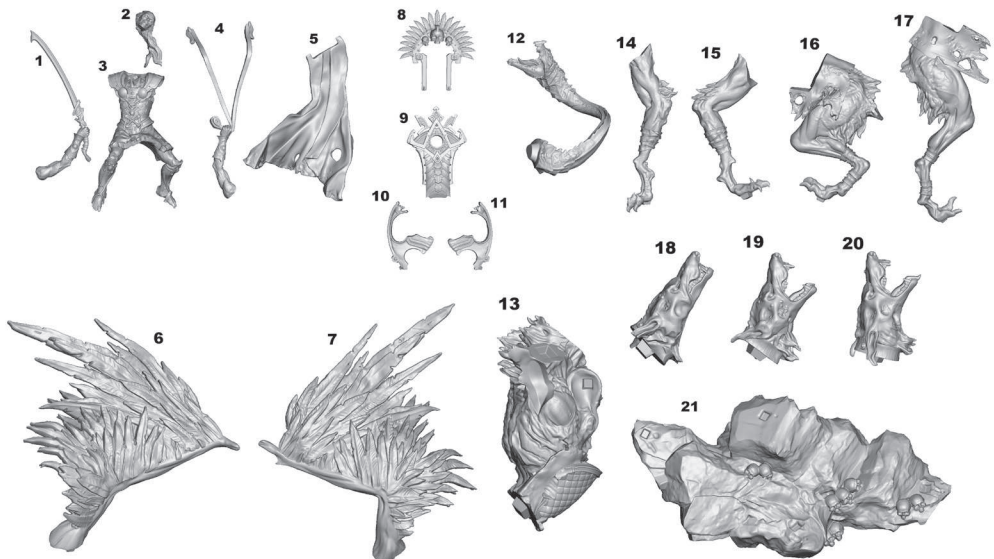


Kerveros


①

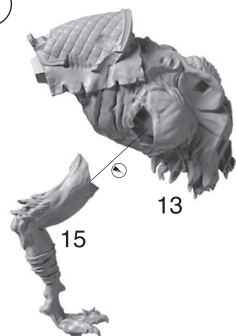


②

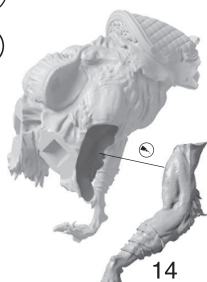

③

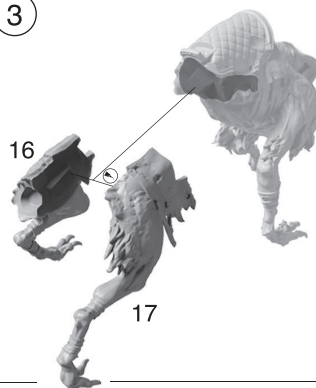


④

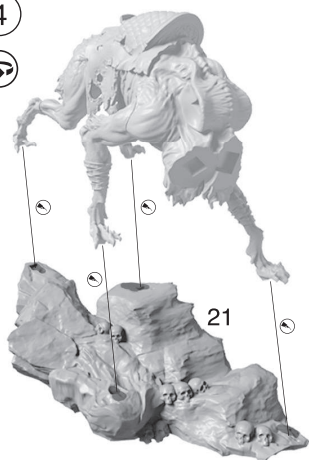


⑤



⑥

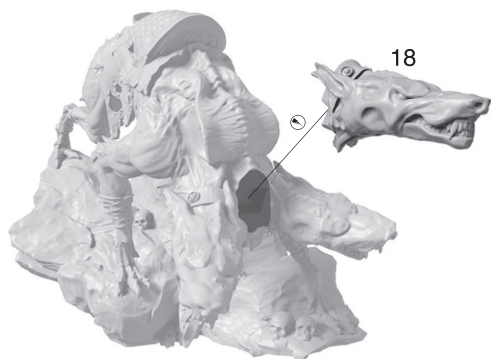

⑦

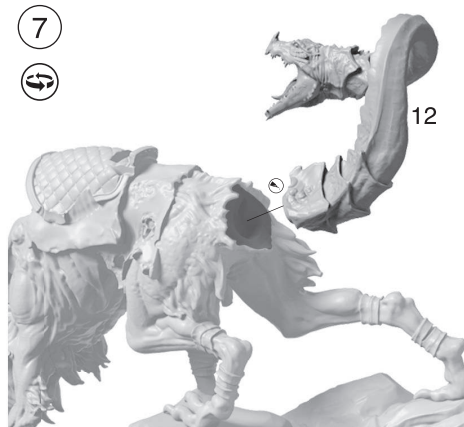


8



9



10

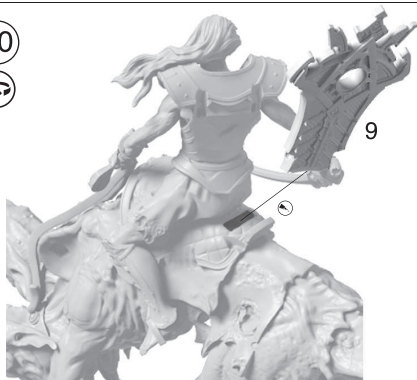


11



12



13

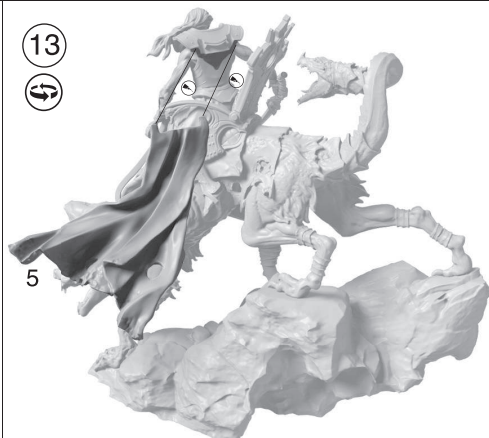

14



15



16

