

First Blood Reinforcements 2026 - Spires Assembly Instructions

READ THIS FIRST

BEFORE ASSEMBLING YOUR MODEL KIT PLEASE READ THROUGH THE INSTRUCTIONS IN THIS BOOKLET CAREFULLY. A pair of plastic cutters is required to remove the plastic components in this kit from their frame. We advise using a mouldline scraping to clean up the parts. To assemble your model you will need super glue for resin parts or plastic glue for plastic parts.

SYMBOL EXPLANATION

- | | | |
|--|--|--|
|  Special Instruction -Please read |  Do not glue the components |  Rotate part |
|  Variant assembly |  Detail view |  Glue the component |
|  Stage complete |  Repeat process | |

You will need:



Plastic Glue



Plier Cutters



Hobby Knife



Scan here:
For the extensive
instructions and
the latest update of
the instructions.


What you get:

CATABOLIC NODE



x1


PHEROMANCER

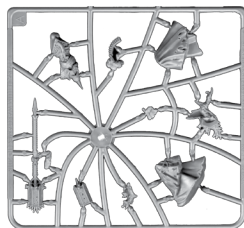

x1

SPIRPHER3121S5100918U-A


BRUTE DRONES

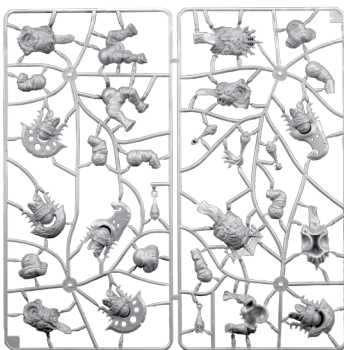

x1

SPIRBRUTR4361S5270818U-A
SPIRBRUTR4361S5270818U-B

FORCE-GROWN DRONES

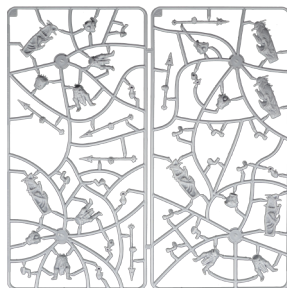

x1



x1

SPIRFGDRR1141S5250718U-A
SPIRFGDRCMDR1121S5100918U-A



Make sure to dry fit parts before gluing.

Customizability:

- Force-Grown Drones


- ♦ All parts are fully interchangeable with the exception of part no. 8 that pairs with part no. 11.
- ♦ Command sprue parts are interchangeable in all poses.

- Brute Drones


- ♦ All parts are fully interchangeable.

Force-Grown Drones


Troop Example

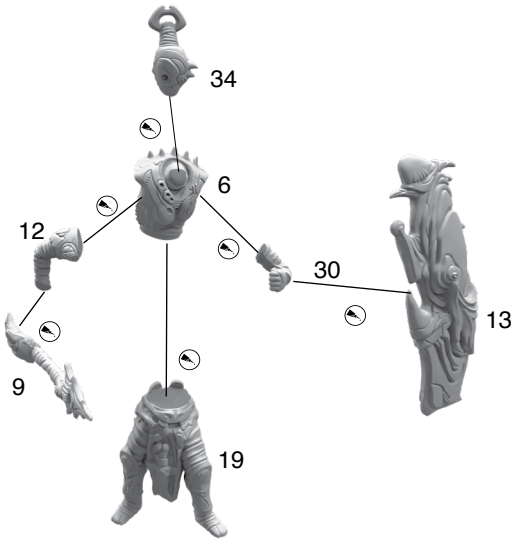


Pheromonic Node

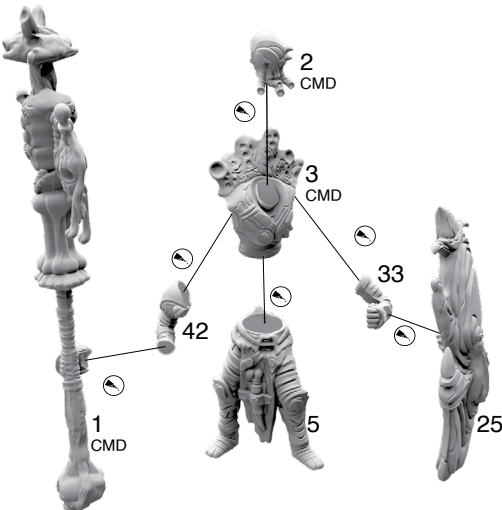

Brute Drones

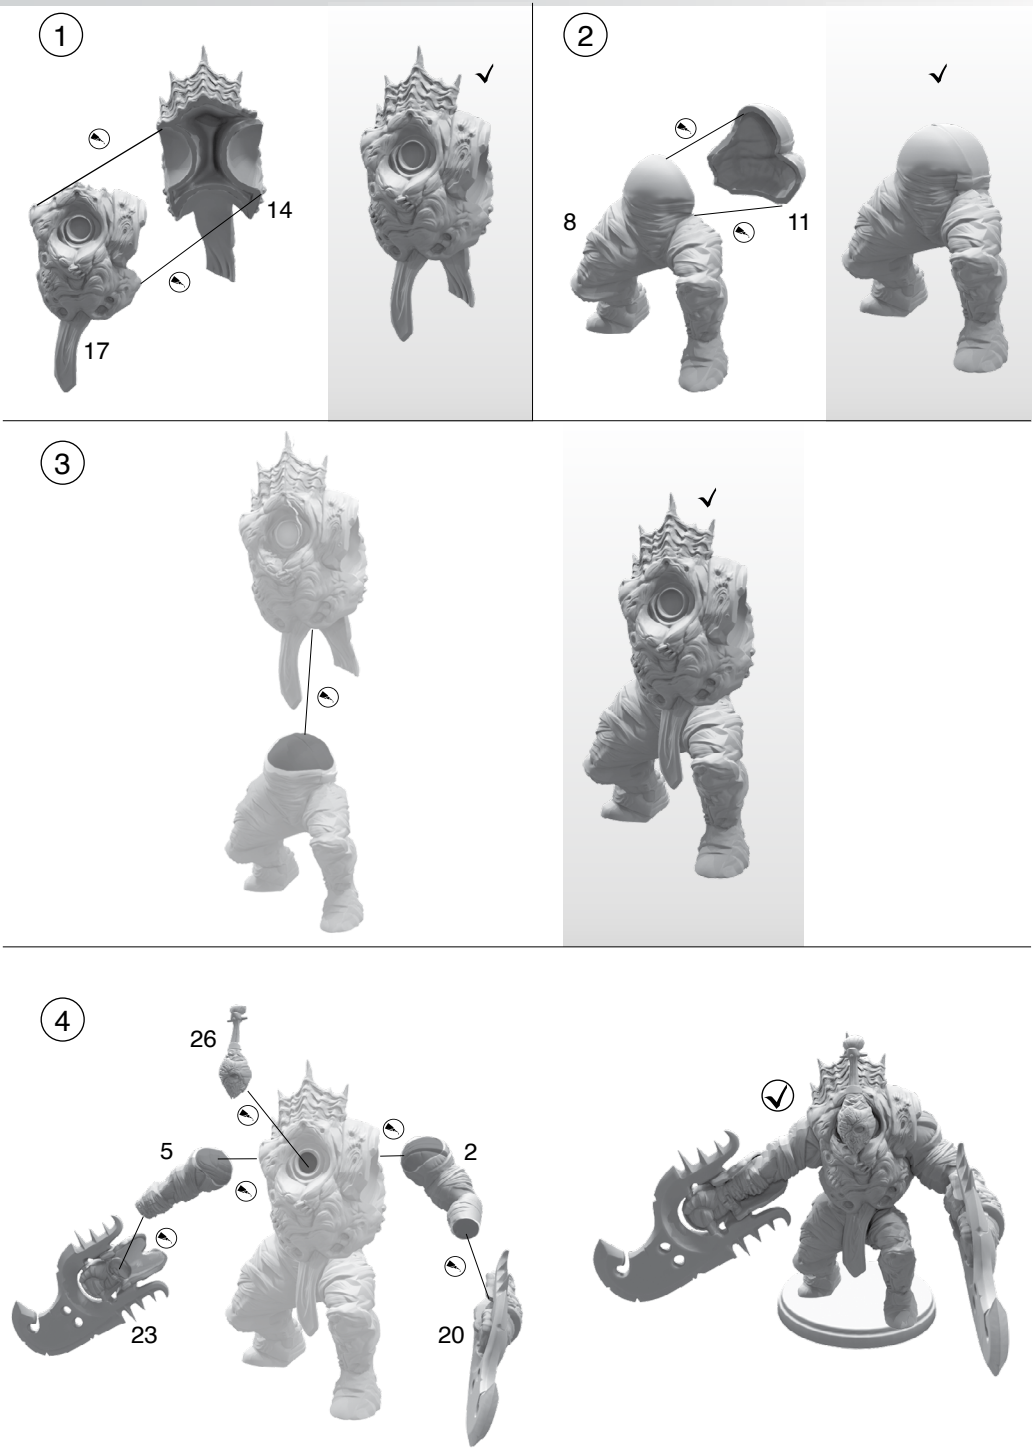

Pheromancer

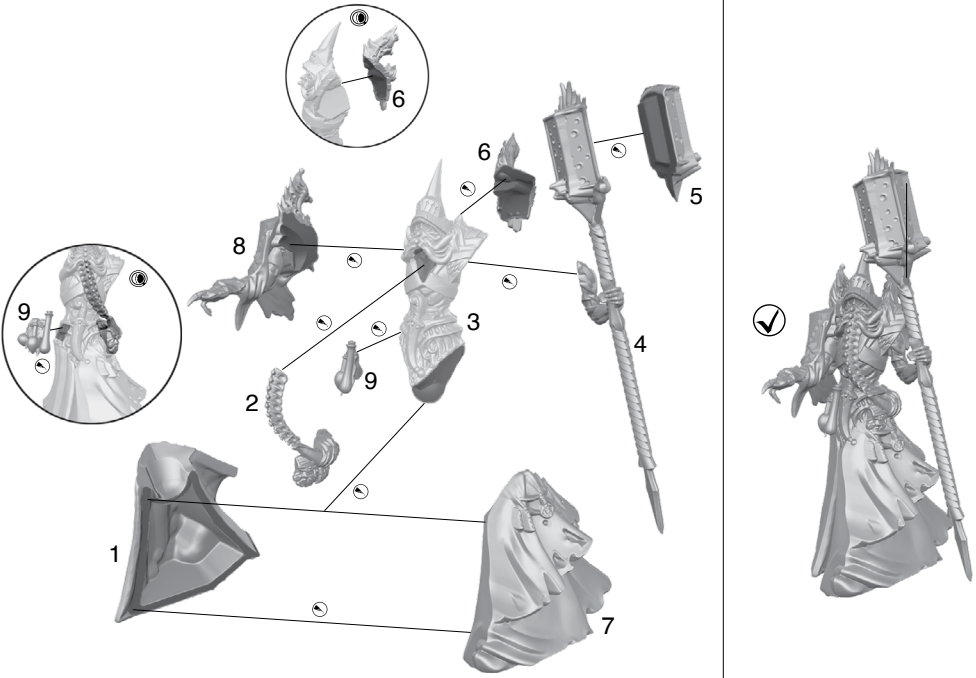

Catabolic Node

